

User's Guide

Manual Bagging Machine


SNC-63WS




1. Safety Guide : Keep Body parts out of motion area and cutting area.

2. Installation (Assembling)

- (1) Assemble 4 pcs of Caster to the bottom side of Stand
- (2) Lift the head up and line up the welded bolts of the head into the hole on stand.
- (3) After confirming the 4 bolts fitted into holes, fasten the bolts with nuts from under side of the stand tightly.

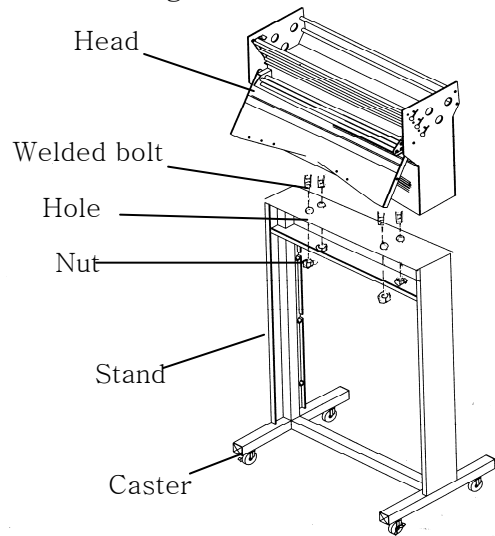


3. Preparing the Poly Roll

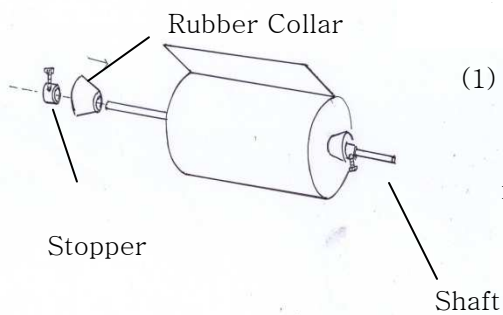


- (1) Adjust poly roll to locate at the center of shaft, insert the right and left rubber collars, and fasten the stopper with bolts

- (2) Release the polybag like to Fig direction (on to the red taped pipe)
- (3) Open the poly bag and pull down about 20cm between both pipes, inserting the hook unit inside of polybag.
- (4) Push the double buttons to seal and cut the poly bag.

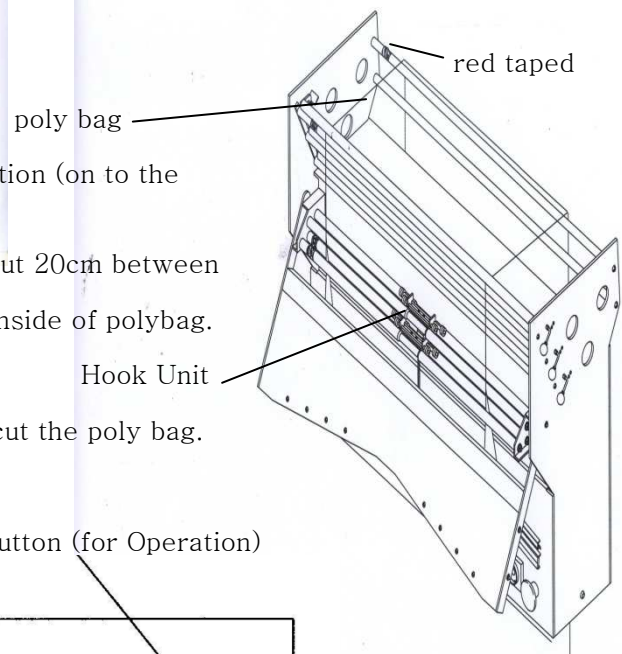

4. Operation

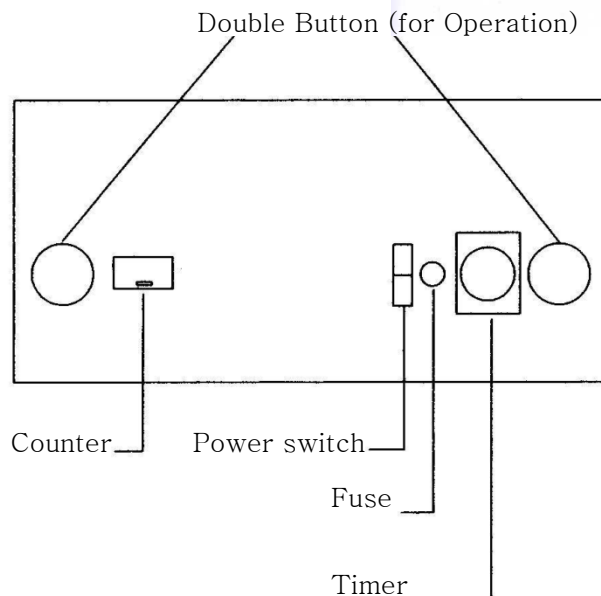

(1) Preparation

- ① Press the Power switch to be “ON”
- ② Sealing time can be controlled by “Timer” (User may use it without any change, because the timer has been set on “0.4” for normal use, considering of PE film thickness, 0.018mm)

(2) Bagging

- ① Put the garment with hanger on the hook
- ② Pull the poly down with both hands to proper length
- ③ Press the double buttons (for sealing and cutting)
- ④ Take out the bagged garment


5. Maintenance

(1) Clean frequently the cutter blade for long life like with wood stick.

(Remove the poly dewes on the blade by wood stick)

(2) Exchange heat wire :

When the heat wire is cut, change it with new one like to below

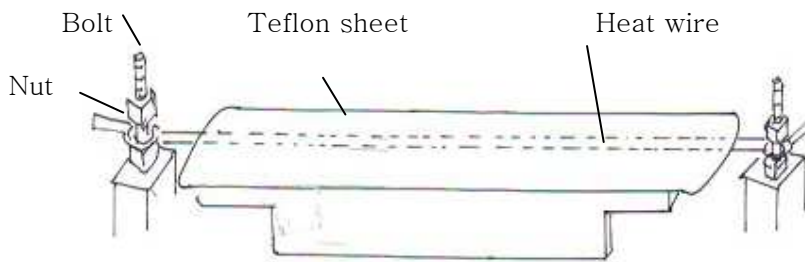

※ How to change the heat wire;

- ① Strip the Teflon sheet out
- ② Loosen both (right and left) nuts.
- ③ Take the heat wire off
- ④ For assembling new one, follow above instruction backward.

6. Parts : Including the bellowed standard accessories and spare parts.

1. Standard Accessories

- | | |
|-------------------------------|-------------------------------------|
| (1) Rubber collars : 6pcs | (2) Wheel (caster) : 4pcs |
| (3) Shaft for poly roll: 3pcs | (4) Nuts (M10) : 4pcs (with washer) |
| (5) Spanner : 1pce | (6) Wrench : 1pce |

2. Spare parts

- | | |
|--|----------------------|
| (1) Fuse : 1pce | (2) Heat wire : 2pcs |
| (3) Relay : Normal 1 pce/Power(large) 1pce | |